

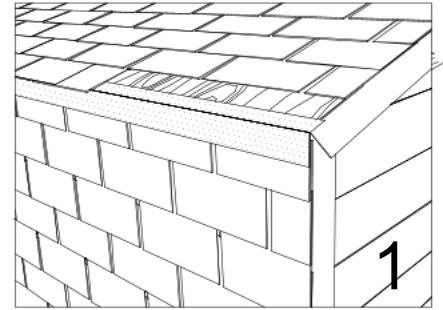


VENTILATION MAXIMUM


Installation of the Mansard Soffit on shingle roofs (new and existing construction)

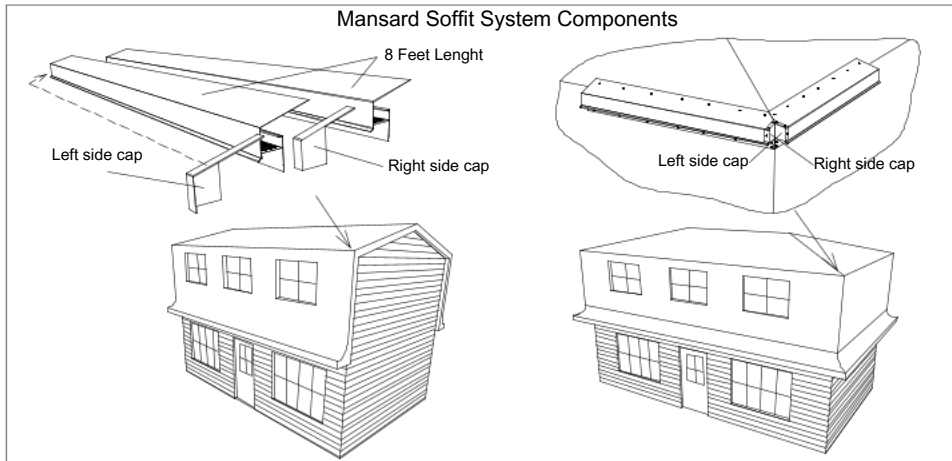


Start by removing the first two rows of shingles on the slope roof exposing the deck at the juncture as per illustration

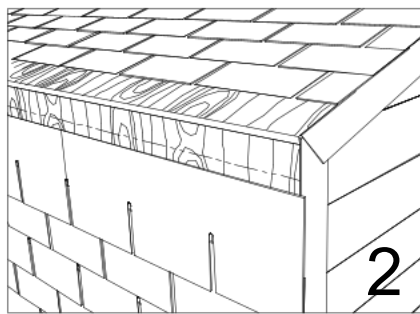


Remove drip edge and last two rows of shingles on the mansard. Trace a line starting from the top portion of the mansard down 2.5 inches straight across as per illustration

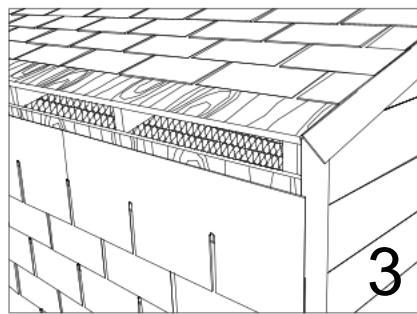


Cut out opening in mansard deck by following the line, exposing the rafters and insulation as per illustration. Be careful not to cut or interfere with the rafters. Make sure that the insulation will not be obstructing air flow into the attic.

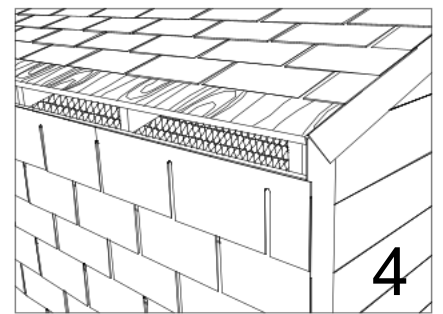


Re-install 1 row of shingles on the mansard roof, then cut out the surplus that is covering the opening as per illustration.

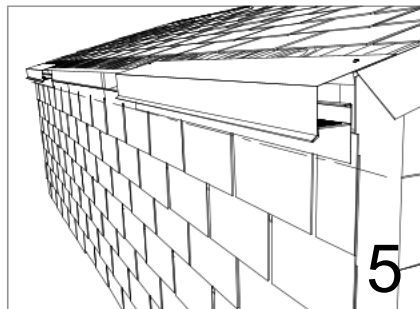


Temporarily install 2 lengths of the mansard soffit drip edge, one at each extremity and make sure that the bottom flashing is tight against the mansard roof and shingles, then trace a line onto the roof deck making sure that they are perfectly aligned as per illustration.

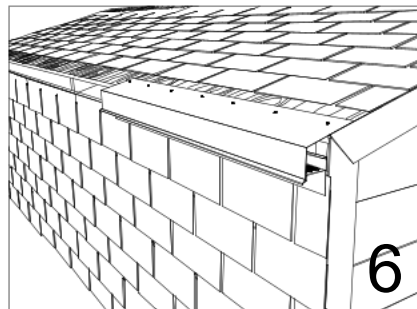


Install the first length of mansard soffit making sure you follow the traced line and secure to deck with screws (screws supplied by contractor).

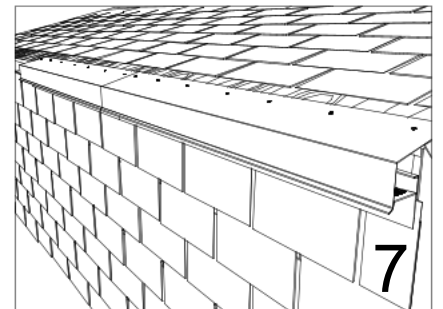


Install a second length overlapping the first by 2 inches and secure to deck, again making sure you follow the traced line. Repeat step #7 for all that follow as per illustration.

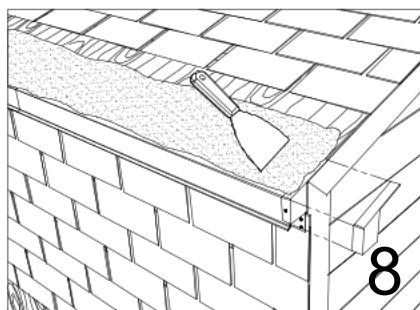

Install the end caps onto each extremity and secure with screws provided. Apply a bitumen sealant over the flashing complete as per illustration.

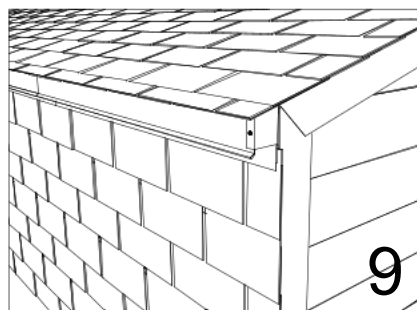

Re-install shingles complete as per illustration.

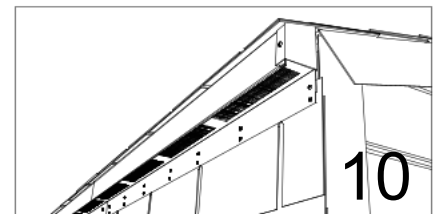

Secure the bottom flashing of the mansard soffit onto the shingles and mansard deck as per illustration.